



# SEAT KIT INSTALLATION INSTRUCTIONS

## CLUB CAR PRECEDENT

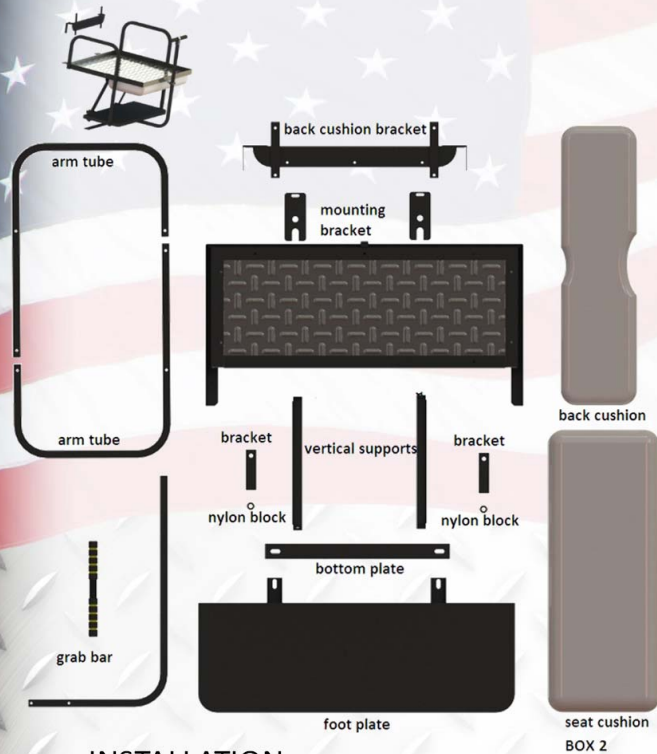


Bag#	Install	Specifications	Qty
A-1	arm tubes (longer bolts on foot plate)	Hex Bolt 1/4-1 1/2	4
		Hex Bolt 1/4-2 1/2	2
		Flat Washer 1/4	12
		Lock Nut 1/4	6
A-2	flipping cargo bed	Hex Bolt 1/4-1	4
		Flat Washer 1/4	8
		Lock Nut 1/4	4
A-3	bottom plate to nylon block to bracket	Hex Bolt 3/8-3	2
		Flat Washer 3/8	4
		Spring Washer 3/8	2
		Nut 3/8	2
A-4	vertical supports to foot plate	Hex Bolt 3/8-1	2
		Flat Washer 3/8	4
		Spring Washer 3/8	2
		Nut 3/8	2
A-5	back cushion	Hex Bolt 1/4-1	4
	seat cushion	Flat Washer 1/4	4
		Self-Drill Screws M4.2*30	6

### INSTALLATION

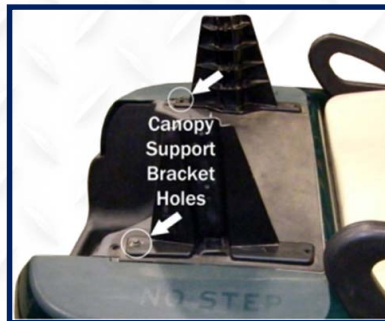

1. Remove all plastic module. Orient holes on mounting brackets with existing holes. Then reattach the plastic module and secure all hardware.

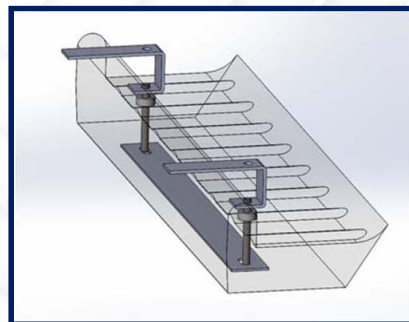

2. Place bottom plate BELOW the cart. Place nylon blocks and brackets ABOVE the bag well. Use hardware A-3 to secure these three parts.

## SEAT KIT INSTALLATION INSTRUCTIONS CLUB CAR PRECEDENT



3. Place foot plate on the brackets. Attach bolt on, pointing upward. Attach vertical supports on the protruded bolt and do not secure until next step finishes. Use hardware A-4.



4. Install seat cushion on flipping cargo bed (6 screws from hardware A-5) . Then install them on the cart and on the vertical supports, use hardware A-2. Secure the bolts.

5. Install arm tubes. Use hardware A-1. USE LONGER ONES ON FOOTPLATE SIDE.




6. Install back cushion bracket. MAKE SURE the flap on each side inserts along the gap, as shown on the picture on the right.

7. Install back cushion on. Use rest hardware from A-5.



# GRAB BAR INSTALLATION INSTRUCTIONS

## FITS ALL STEELENG REAR FLIP SEAT KIT

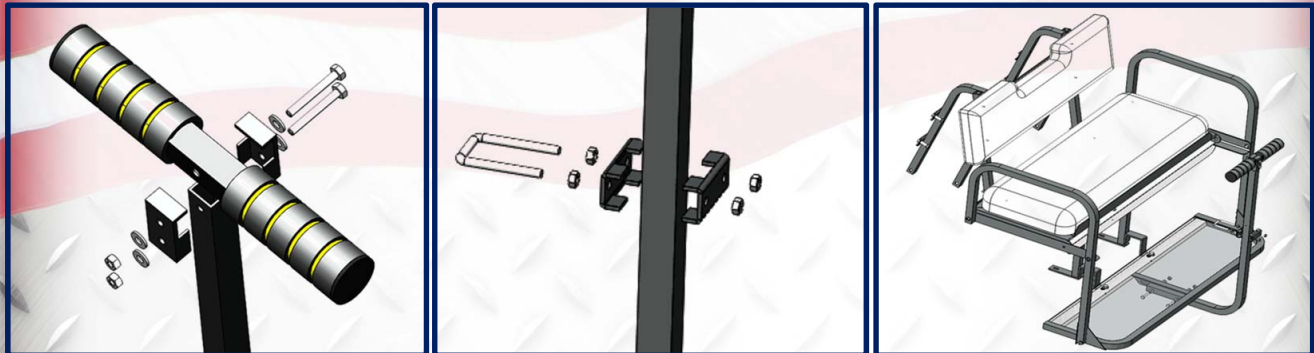

1. First, install the sponge handle onto the grab bar. Separate the clamp and slot the grab bar into the opening. Then attach the clamp onto the grab bar angle, use two 1/4-1 3/4 bolts, four washers and two cap nuts to secure.

*Tool required: 7/16 socket wrench, 7/16 spanner*

2. Install the grab bar assembly on the foot plate by bolting the lower part of it with the brace welded below the foot plate. Use two 1/4-1 3/4 bolts, four washers and two lock nuts. Don't tighten.

*Tool required: 7/16 socket wrench, 7/16 spanner*


3. Screw M6 nut to U-bolt all the way down to the last thread. Use U-bolt to attach the bracket on the grab bar tube and attach M6 lock nuts on. The correct position of the U bolt should hold the cargo bed as flat and even. Once position is ok, tighten both lock nuts and nuts.

*Tool required: 10mm spanner*

4. Then tighten the bolts below the foot plate.

Please refer to below chart to identify your hardware bag# to install grab bar.

Cart Style	Hardware Bag#
EZGO TXT	B-7
Club Car DS	C-8
Yamaha G14-G22	E-7
EZGO RXV	R-5
Club Car Precedent	A-6
Yamaha Drive	D-7

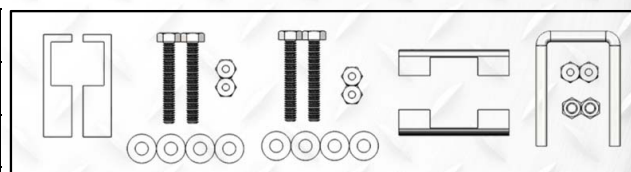

Hex bolt 1/4-1 3/4	4	Clamp	2	Nut M6	2
Flat washer 1/4	8	Bracket	2		
Cap nut 1/4	2	U-Bolt	1		
Lock nut 1/4	2	Lock nut M6	2		