


# SEAT KIT INSTALLATION INSTRUCTIONS

## EZGO TXT

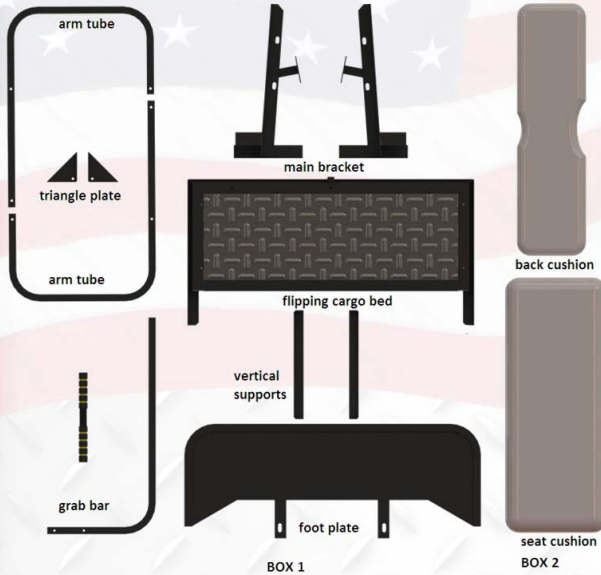

BAG#	INSTALL	SPECIFICATIONS	QTY
B-1	armrest	hex bolt 1/4-1 1/2	4
		hex bolt 1/4-2 1/2	2
		flat washer 1/4	12
		lock nuts 1/4	6
B-2	flip flop frame	hex bolt 1/4-1	4
		flat washer 1/4	8
B-3	foot plate	lock nut 1/4	4
		hex bolt 3/8-2	2
		flat washer 3/8	4
		spring washer 3/8	2
B-4	main bracket	nut 3/8	2
		hex bolt 3/8-1 1/2	4
		flat washer 3/8	4
		spring washers 3/8	4
B-5	roof strut	nut 3/8	4
		hex bolt 5/16-1 3/4	4
		flat washer 5/16	8
B-6	Back cushion	lock nuts 5/16	4
	Seat cushion	hex bolt 1/4-1	4
		self-drill screw M4.2*30	6

### INSTALLATION



1. Remove all canopy hardware from 4 corners (2 in front and 2 in rear) of vehicle canopy. Retain the hardware. You will need them to reattach canopy.
2. Remove bolts from front seat back. Retain bolts. You will need them to reattach front seat back.
3. Remove and retain hardware that holds rear struts to vehicle. Slide out rear struts. You will need this hardware later.
4. Remove rear basket hardware. Lift off basket.

## SEAT KIT INSTALLATION INSTRUCTIONS EZGO TXT



5. Install seat cushion on flipping cargo bed. Use hardware B-6.



6. Use a 1/2" drill bit, remove bag well rivets. Bolt foot plate to the underside of the bagwell and put the vertical supports through the extruded bolt and secure. Use hardware B-3.



7. Set in main brackets and line up holes with ones where basket bolts were removed. Remove the access engine cover to tighten bolts from inside and put back the cover. Use hardware B-4.



8. Install flipping cargo bed on vertical supports and on main brackets. Use hardware B-2.



9. Install arm tubes to flipping cargo bed and foot plate, use hardware B-1 (longer bolts on foot plate). Install triangle brackets behind armrest and under foot plate.




10. Install rear roof struts to main bracket, use hardware B-5. Install rear seat back to main frame, use hardware B-6. Attach front seat back to main bracket and reattach canopy.



# GRAB BAR INSTALLATION INSTRUCTIONS

## FITS ALL STEELENG REAR FLIP SEAT KIT

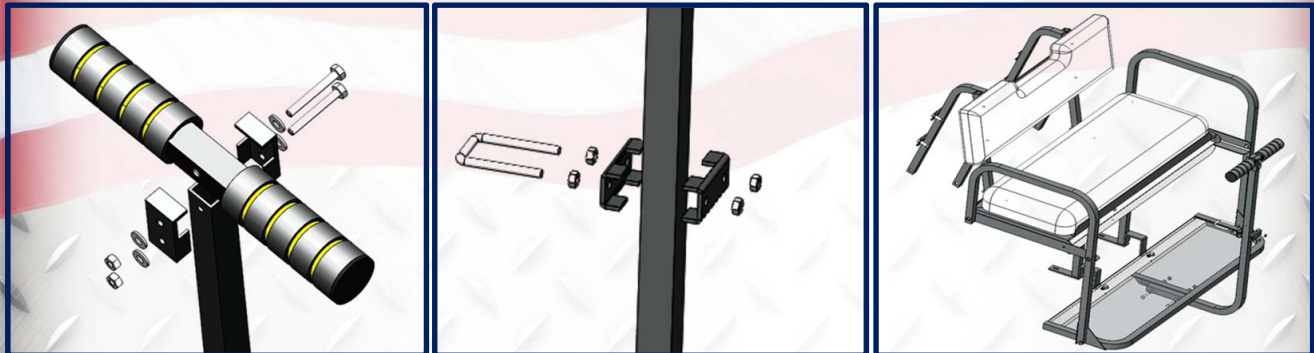

1. First, install the sponge handle onto the grab bar. Separate the clamp and slot the grab bar into the opening. Then attach the clamp onto the grab bar angle, use two 1/4-1 3/4 bolts, four washers and two cap nuts to secure.

*Tool required: 7/16 socket wrench, 7/16 spanner*

2. Install the grab bar assembly on the foot plate by bolting the lower part of it with the brace welded below the foot plate. Use two 1/4-1 3/4 bolts, four washers and two lock nuts. Don't tighten.

*Tool required: 7/16 socket wrench, 7/16 spanner*


3. Screw M6 nut to U-bolt all the way down to the last thread. Use U-bolt to attach the bracket on the grab bar tube and attach M6 lock nuts on. The correct position of the U bolt should hold the cargo bed as flat and even. Once position is ok, tighten both lock nuts and nuts.

*Tool required: 10mm spanner*

4. Then tighten the bolts below the foot plate.

Please refer to below chart to identify your hardware bag# to install grab bar.

Cart Style	Hardware Bag#
EZGO TXT	B-7
Club Car DS	C-8
Yamaha G14-G22	E-7
EZGO RXV	R-5
Club Car Precedent	A-6
Yamaha Drive	D-7

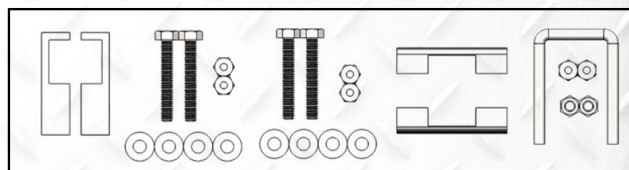

Hex bolt 1/4-1 3/4	4	Clamp	2	Nut M6	2
Flat washer 1/4	8	Bracket	2		
Cap nut 1/4	2	U-Bolt	1		
Lock nut 1/4	2	Lock nut M6	2		