





**STEEL: 18103, 18104, 18105**  
**ALUMINUM: 18123, 18124, 18125**  
**REAR FLIP SEAT**  
**WILL FIT \*E-Z-GO® RXV®**  
**INSTALLATION INSTRUCTIONS**

**INCLUDED:**

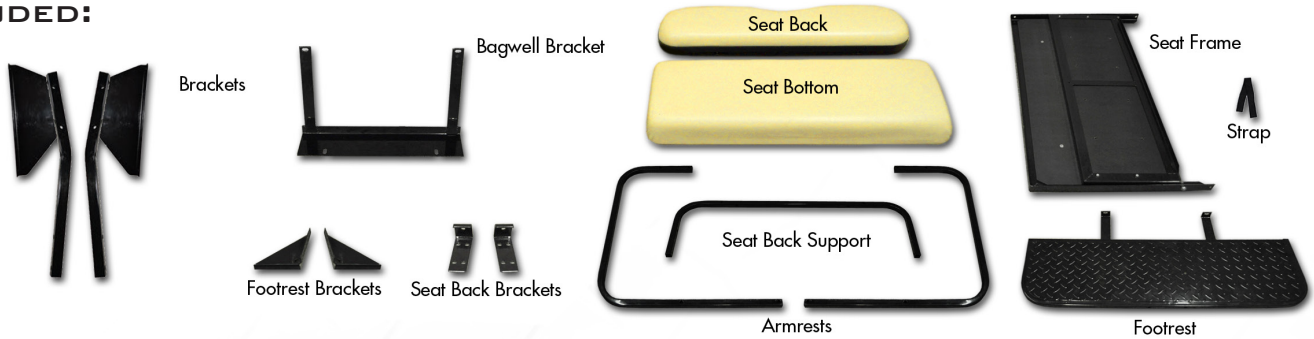


Remove factory canopy, rear struts, seat back and motor cover from golf cart. Retain hardware you will need it later.

1

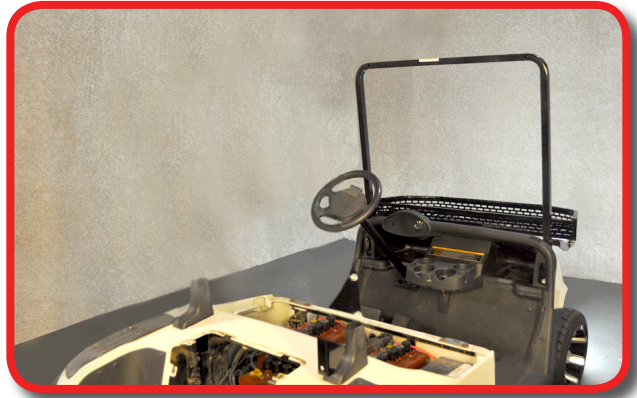

Insert brackets as shown. Make sure the lip of the bracket faces inward as displayed on the picture.

2

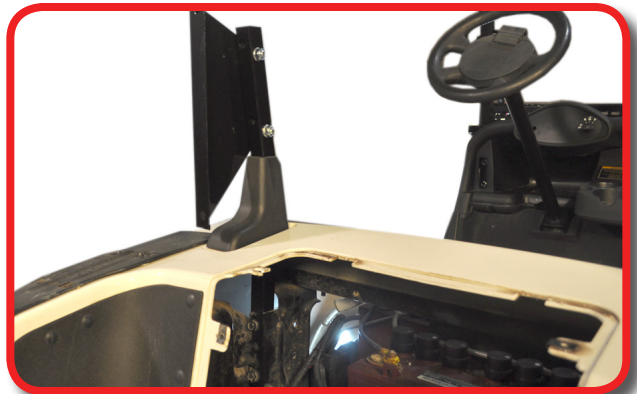

3  
Attach brackets as shown on both sides using hardware retained from step 1



4  
Attach rear struts using retained hardware from rear strut and tighten.



5  
Attach motor cover using hardware retained from step 1.



6  
Attach outermost bolts in bagwell and attach bagwell bracket as shown. Be sure the lip of the bagwell bracket faces towards the inside of the cart as shown and tighten.







7  
Attach seat frame to bagwell brackets using hardware from pack 1.



8  
Attach seat frame to brackets using remaining hardware from pack 1 and tighten.

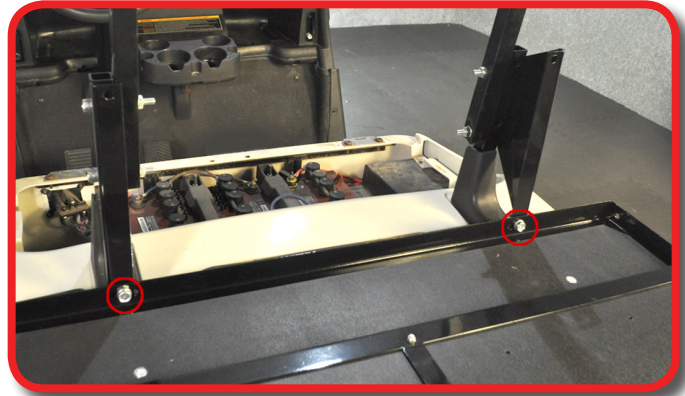

9  
Attach armrests and seat back support using hardware from pack 2 as shown. Be sure to place spacers from hardware pack between the armrest and seat back support bracket. Do not tighten hardware.

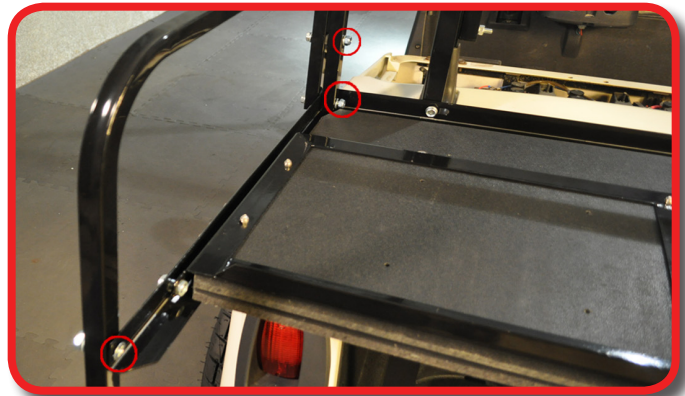

10  
The spacers should be placed as shown on both sides of the cart.




# 11

Attach footrest and footrest brackets using hardware from pack 3.




# 12

Attach seat back brackets to seat back using hardware from pack 4.

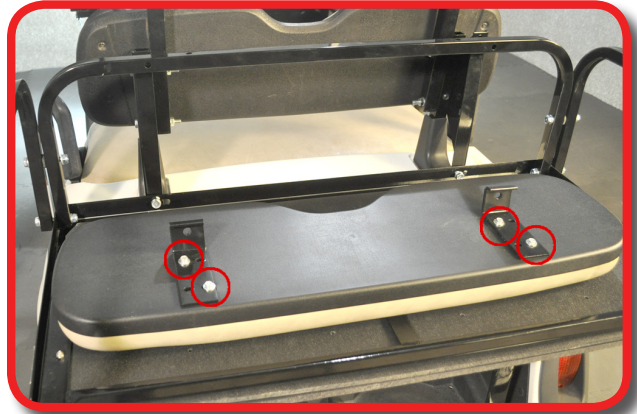


# 13

Attach front seat back to brackets using retained hardware from step 1.

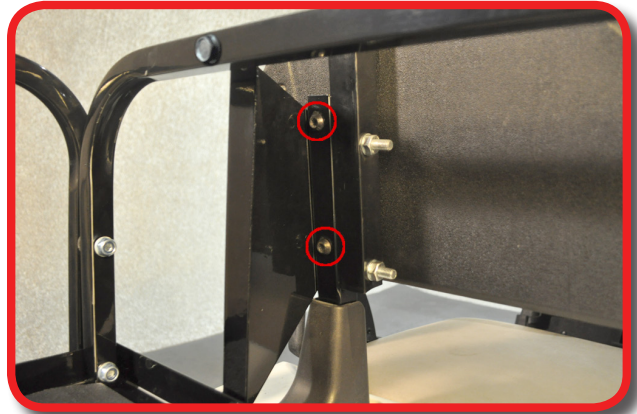


# 14

Attach seat back to seat back support using hardware from pack 5. Once this is complete you can tighten down all rear flip seat hardware.

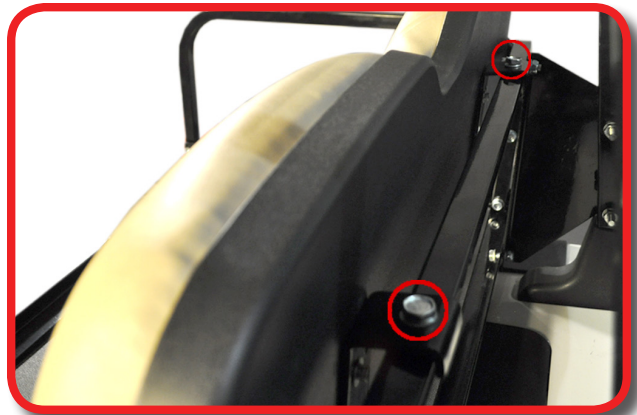

# 15

Attach seat bottom and strap to seat frame using hardware from pack 6.

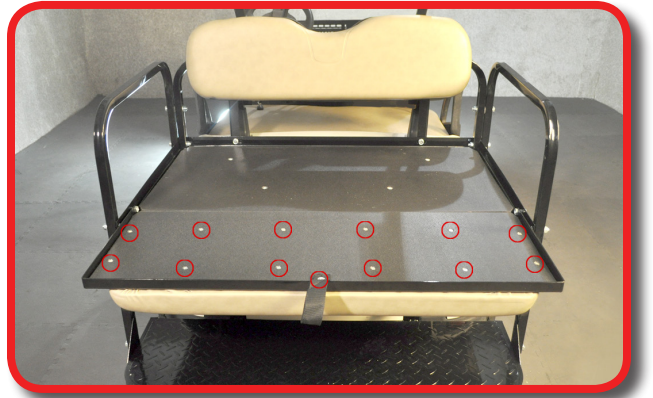

**INSTALLATION COMPLETE**

