


SEAT KIT INSTALLATION INSTRUCTIONS EZGO RXV

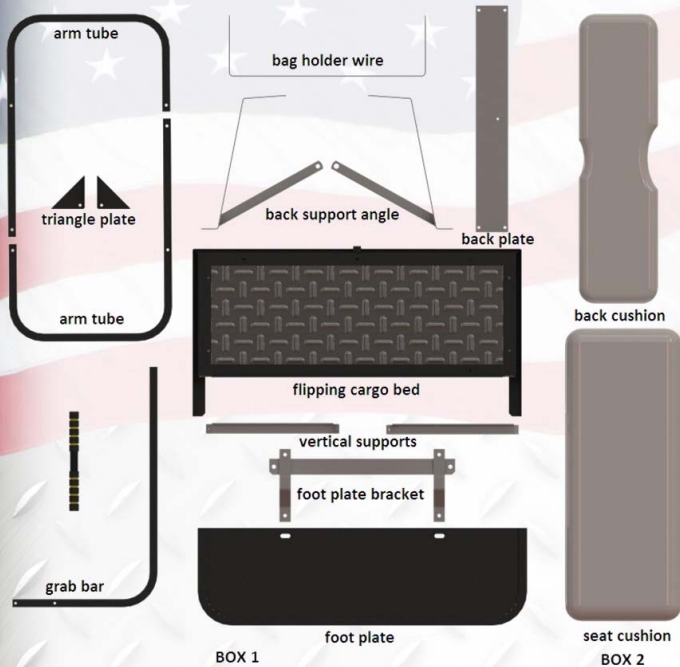

BAG#	Function	Hardware	Spec.	Qty.
R-1	arm tube	hex bolt	1/4-1 1/2	4
		hex bolt	1/4-2 1/2	2
		flat washer	1/4	12
		lock nuts	1/4	6
R-2	flip flop frame	hex bolt	1/4-1	4
		flat washer	1/4	8
		lock nuts	1/4	4
R-3	main bracket	hex bolt	3/8-1 1/8	4
		flat washer	3/8	8
		spring washer	3/8	4
		nut	3/8	4
R-4	back cushion	hex bolt	1/4-1	4
	seat cushion	flat washer	1/4	4
R-5	grab bar	self-drill screw	M4.2*30	6
		Clamp		2
		hex bolt	1/4-1 3/4	4
		flat washer	1/4	8
		lock nut	1/4	2
		cap nut	1/4	2
		Bracket		2
		U Bolt		1
		lock nut	M6	2
Nut	M6	2		

INSTALLATION



1. Remove the sweater basket from cart first, leave all bolts/nuts on cart for later use.



2. Remove all nuts from backrest cushion cap, leave washers on.




3. Install back support angle on the back cushion, use above bolts first, make sure all direction is correct (backrest cushion / left and right side back support angles direction)



4. Bolts on back plate with bottom nuts and drill self tapping screws into center holes. Part one finished.

SEAT KIT INSTALLATION INSTRUCTIONS EZGO RXV

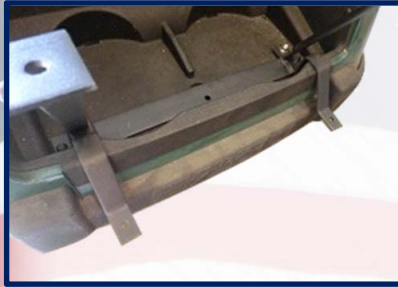

5. Install two vertical supports on foot plate bracket using hardware R-3.




6. Install foot plate bracket with vertical supports assembly on cart's bagwell area using existing factory hardware. Tips: Install vertical supports first.



7. Install back support angle / back cushion / back plate (part one installed from step 2-step 4) on cart's main frame using total 6 pieces of existing factory bolts/nuts (include left & right). Picture shows back support angle only.



8. Install seat cushion on flipping cargo bed using 6 self-screws from hardware R-4. Then install flipping cargo bed on vertical supports and back support angles using hardware R-2. Install arm tube on flipping cargo bed and foot plate using hardware R-1 (longer bolts on foot plate). Install triangle brackets between armrest and under foot plate.

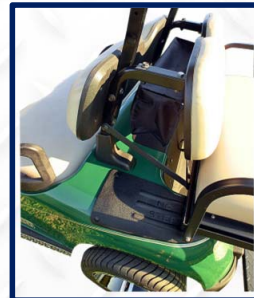


9. Hook bag holder wire onto holes on the back of back plate, tied the bag up on it.

WWW.STEELENGGOLFCART.COM

GRAB BAR INSTALLATION INSTRUCTIONS

FITS ALL STEELENG REAR FLIP SEAT KIT

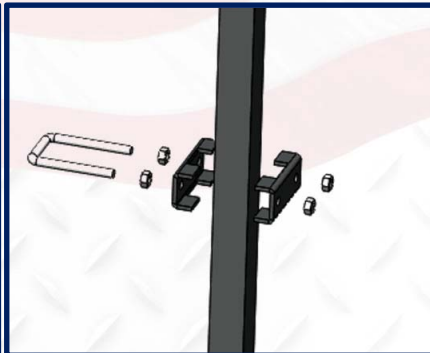

1. First, install the sponge handle onto the grab bar. Separate the clamp and slot the grab bar into the opening. Then attach the clamp onto the grab bar angle, use two 1/4-1 3/4 bolts, four washers and two cap nuts to secure.

Tool required: 7/16 socket wrench, 7/16 spanner

2. Install the grab bar assembly on the foot plate by bolting the lower part of it with the brace welded below the foot plate. Use two 1/4-1 3/4 bolts, four washers and two lock nuts. Don't tighten.

Tool required: 7/16 socket wrench, 7/16 spanner


3. Screw M6 nut to U-bolt all the way down to the last thread. Use U-bolt to attach the bracket on the grab bar tube and attach M6 lock nuts on. The correct position of the U bolt should hold the cargo bed as flat and even. Once position is ok, tighten both lock nuts and nuts.

Tool required: 10mm spanner

4. Then tighten the bolts below the foot plate.

Please refer to below chart to identify your hardware bag# to install grab bar.

Cart Style	Hardware Bag#
EZGO TXT	B-7
Club Car DS	C-8
Yamaha G14-G22	E-7
EZGO RXV	R-5
Club Car Precedent	A-6
Yamaha Drive	D-7

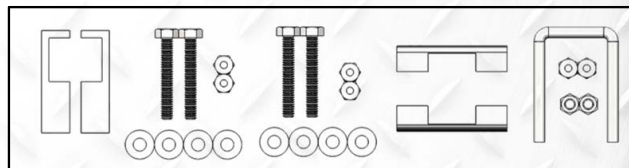

Hex bolt 1/4-1 3/4	4	Clamp	2	Nut M6	2
Flat washer 1/4	8	Bracket	2		
Cap nut 1/4	2	U-Bolt	1		
Lock nut 1/4	2	Lock nut M6	2		