



ACC-0088 Dual Port USB Charging Receptacle Installation Instructions

Contents of ACC-0088 Kit

- a Receptacle
- b Threaded Retaining Ring
- c Protective Cap



Tools Required for Installation

- 1-1/2" Hole Saw with Pilot Hole Bit
- File or Sandpaper


Caution: This accessory is designed for 12V DC operation only. Operating this kit at a higher voltage will void any and all warranties.

Before You Start

1. Turn the key to the OFF position.
2. Place the TOW/RUN switch in the TOW position, if equipped.
3. Remove the vehicle's positive & negative connections from the battery/battery pack.
4. Engage the parking brake.

Dual Port USB Outlet Installation


1. Find a convenient location to mount the outlet. Mounting locations will vary depending on the vehicle. Mark the center of the mounting location with a marking device.
2. Drill a hole at the marked location using a 1-1/2" hole saw (maximum size).
3. Insert the dual USB outlet and wires through the protective cap into the drilled hole. Secure with the threaded retaining ring.

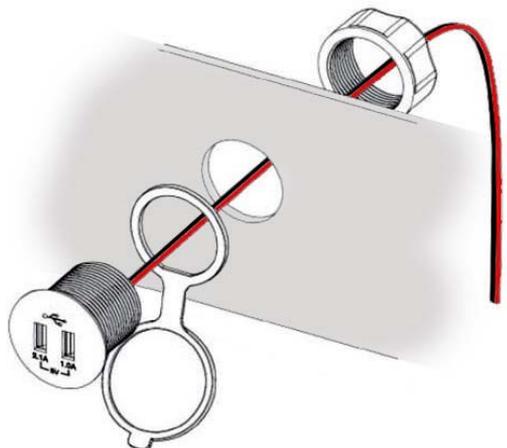

4. Connect the (+) red and (-) black wires to the power source using the wiring diagram below. If using a RHOX Plug & Play Light Kit Harness, connect the wires to the connections used for the 12V outlet. Cut the wires to the desired length if needed.

CAUTION: Connecting the wires to the wrong terminals will damage the outlet.

NOTE: A fuse holder (ACC-0019) and a 15A fuse are recommended if connecting the outlet directly to a 12V battery or voltage reducer.

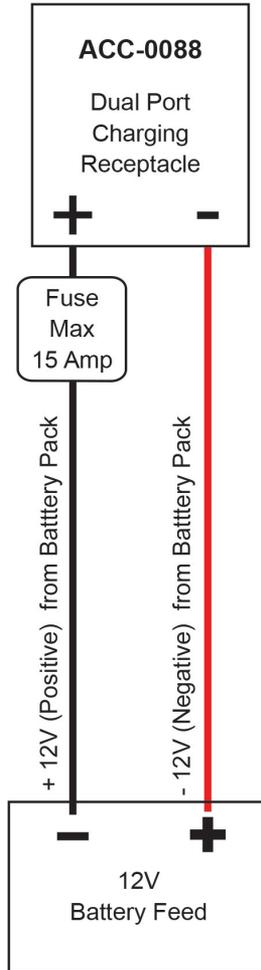

Your Dual Port USB Charging Receptacle is now complete.
Please enjoy your safely!