



ACC-NB06A

Yamaha Drive/G29 Nerf Bar Installation Instructions

Kit Contents:

- (1) Driver's Side Stainless Steel Nerf Bar
- (1) Passenger's Side Stainless Steel Nerf Bar
- Hardware Kit (not shown)



Step 2

Step 1: Preparing the vehicle for Nerf Bar installation: Jack up the front and rear of Yamaha Drive. For safety use jack stands to support both the front and rear of vehicle.

Step 2: Test fitting the Nerf Bars: Align the Nerf bar so the vertical mounting tabs fit into the three pockets in the molded underbody of the cart. Make sure when the vertical mounting tabs are inserted into the pockets, the Nerf Bars are pushed all the way towards the center of the car. Be certain that the vertical mounting tabs are tight against the inside wall of the mounting pockets. Remove the Nerf Bars


Step 3: Locating and drilling mounting holes: Place the Nerf Bar vertical mounting tabs beside the molded pockets in the golf cart underbody. (It will help to have an extra set of hands or a few clamps during this step.) Use a level and tape measure to ensure that the Nerf Bars are even and level on the cart before marking any mounting holes. Using a center punch and the holes in the Nerf Bars as a guide, mark the position of the mounting holes on the outsides of the pockets. Once all of the mounting holes are marked use a 1/8" drill bit to drill pilot holes into the pockets where the Nerf Bars will mount. Drill out the 1/8" pilot holes using a 5/16" drill bit.

Step 4: Installing the Nerf Bars: Insert the vertical mounting tabs on the Nerf Bars into the pockets. Use the included hardware to fasten the Nerf Bars to the vehicle utilizing the captured nuts on vertical mounting tabs.

Step 5: Optional: For added support it is possible to drill one additional bolt hole below each existing hole. (Mounting hardware is not included for this optional step.)



Step 3

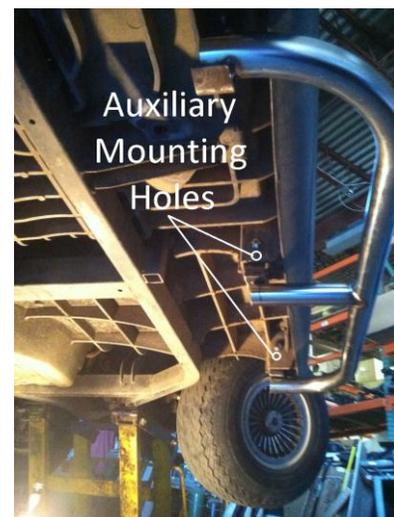

Step 4