



RHINO


Rugged parts for your ride.

HITCH-16

Rear Hitch

E-Z-Go RXV

Installation Instructions

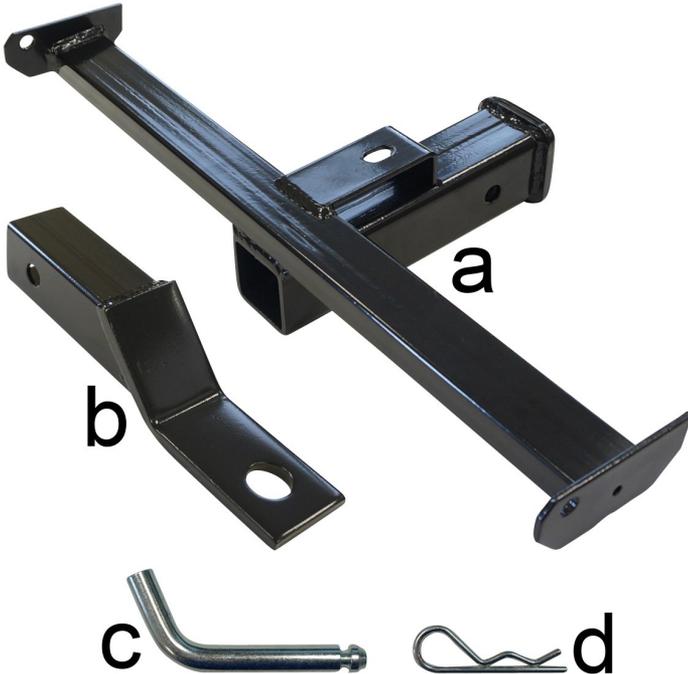

Contents of HITCH-16 Rear Hitch Kit:

- a (1 ea.) Hitch Receiver
- b (1 ea.) Hitch Insert
- c (1 ea.) Hitch Pin
- d (1 ea.) Cotter Pin
- e (1 ea.) Bag of Hardware (Contents on Next Page)

Caution: Please read through the instructions carefully. Installer is responsible for damage if instructions are not followed properly. Safety glasses should be worn during all parts of the installation. Extra installers will be helpful in some parts of the installation. Refer to manufacturer's specifications for towing capacity of vehicle.



Contents of HITCH-16 Hardware Kit		Qty.
a	12mm-1.75 x 80mm Hex Head Bolt	1
b	12mm-1.75 Nylock Nut	1
c	12mm Fender Washers	2
d	12mm x 45mm Sleeve	1
e	10mm-1.5 x 40mm Hex Head Bolts	2
f	10mm-1.5 Nylock Nuts	2
g	10mm Flat Washers	4


Tools Needed for Installation

- Sockets & Wrenches (15mm, 17mm, 19mm)
- Flat Head Screwdriver
- Needle Nose Pliers
- Rubber Mallet

Installation Preparation

1. Engage parking brake.
2. Turn key OFF.
3. Electric Carts Only: Place Tow/Run Switch in TOW.
4. Chock the wheels.
5. Clear the mounting location for the hitch by removing the (2) barrel clips located on the chassis below the rear bumper. Discard.


NOTE: Leaf spring is not shown.

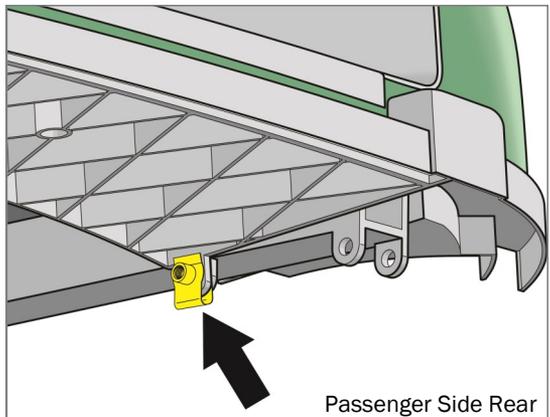


Installation

1. Attach the hitch receiver to the rear chassis using (2) 10mm x 40 Hex Head Bolts, (4) 10mm Flat Washers and (2) 10mm Nylock Nuts. Hand tighten.


NOTE: Use a jack or extra installer to hold the receiver up during this step.

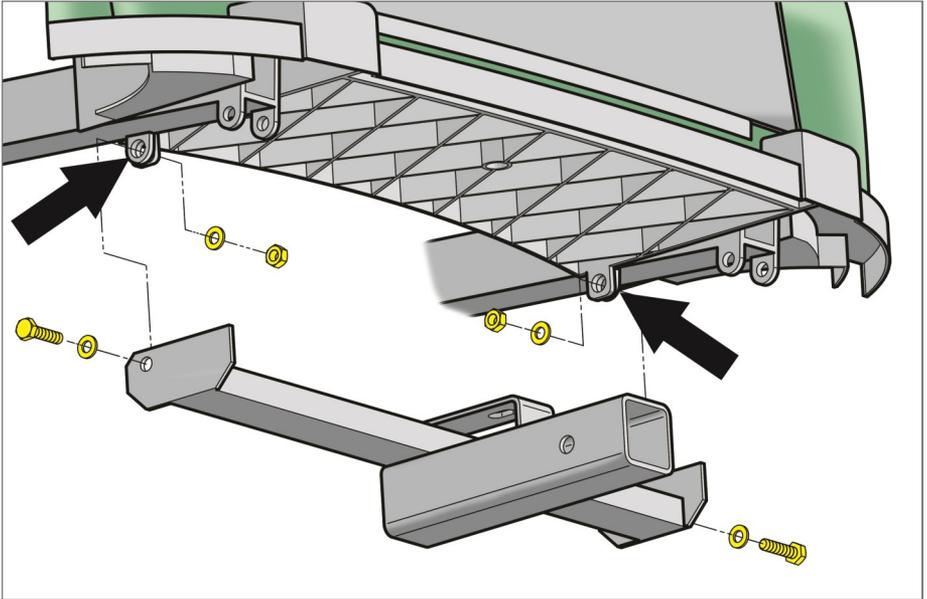

2. Use a rubber mallet to insert the sleeve into the center hole of the bagwell area.

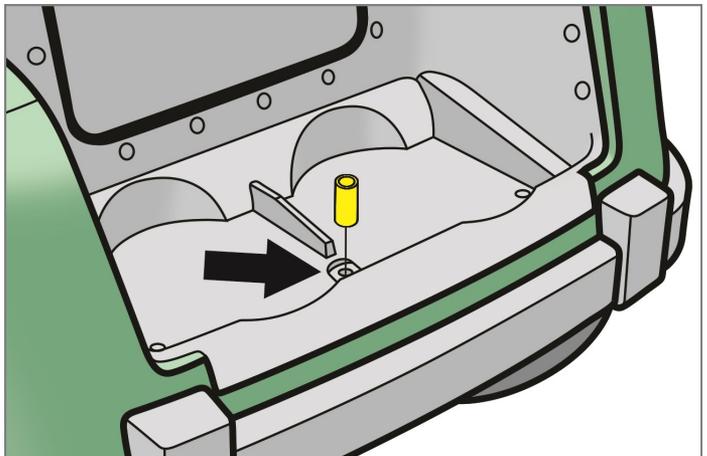


3. Fasten the center of the hitch receiver to the underside of the bagwell area using (1) 12mm x 80mm Hex Head Bolt, (2) 12mm Fender Washers and (1) 12mm Nylock Nut. Hand tighten.

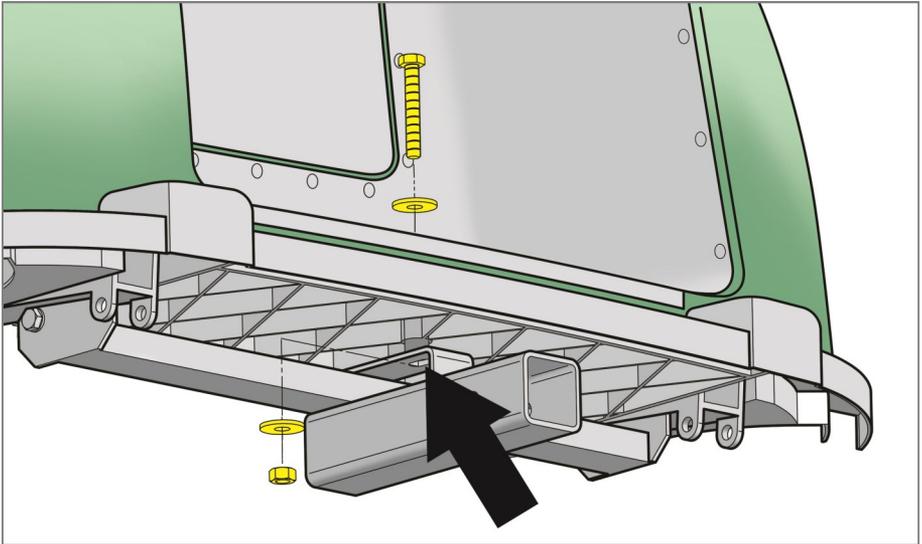

4. Tighten all hardware.
5. Insert the hitch insert into the receiver. Secure with the hitch pin and cotter pin.

CAUTION: Do NOT use the hitch without the hitch pin and cotter pin. Always drive at a reasonable and safe speed when towing.

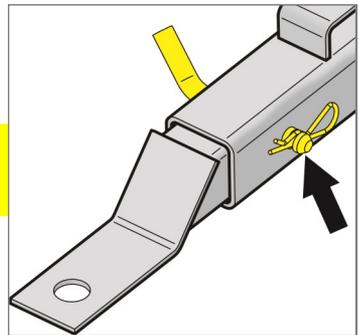

This completes the installation of your RHOX Rear Hitch. Please enjoy safely!

Scan QR code or use the link below to view the installation video.

<https://vimeo.com/user39935056>

